



SCHEMATIC DIAGRAM-1(X458)

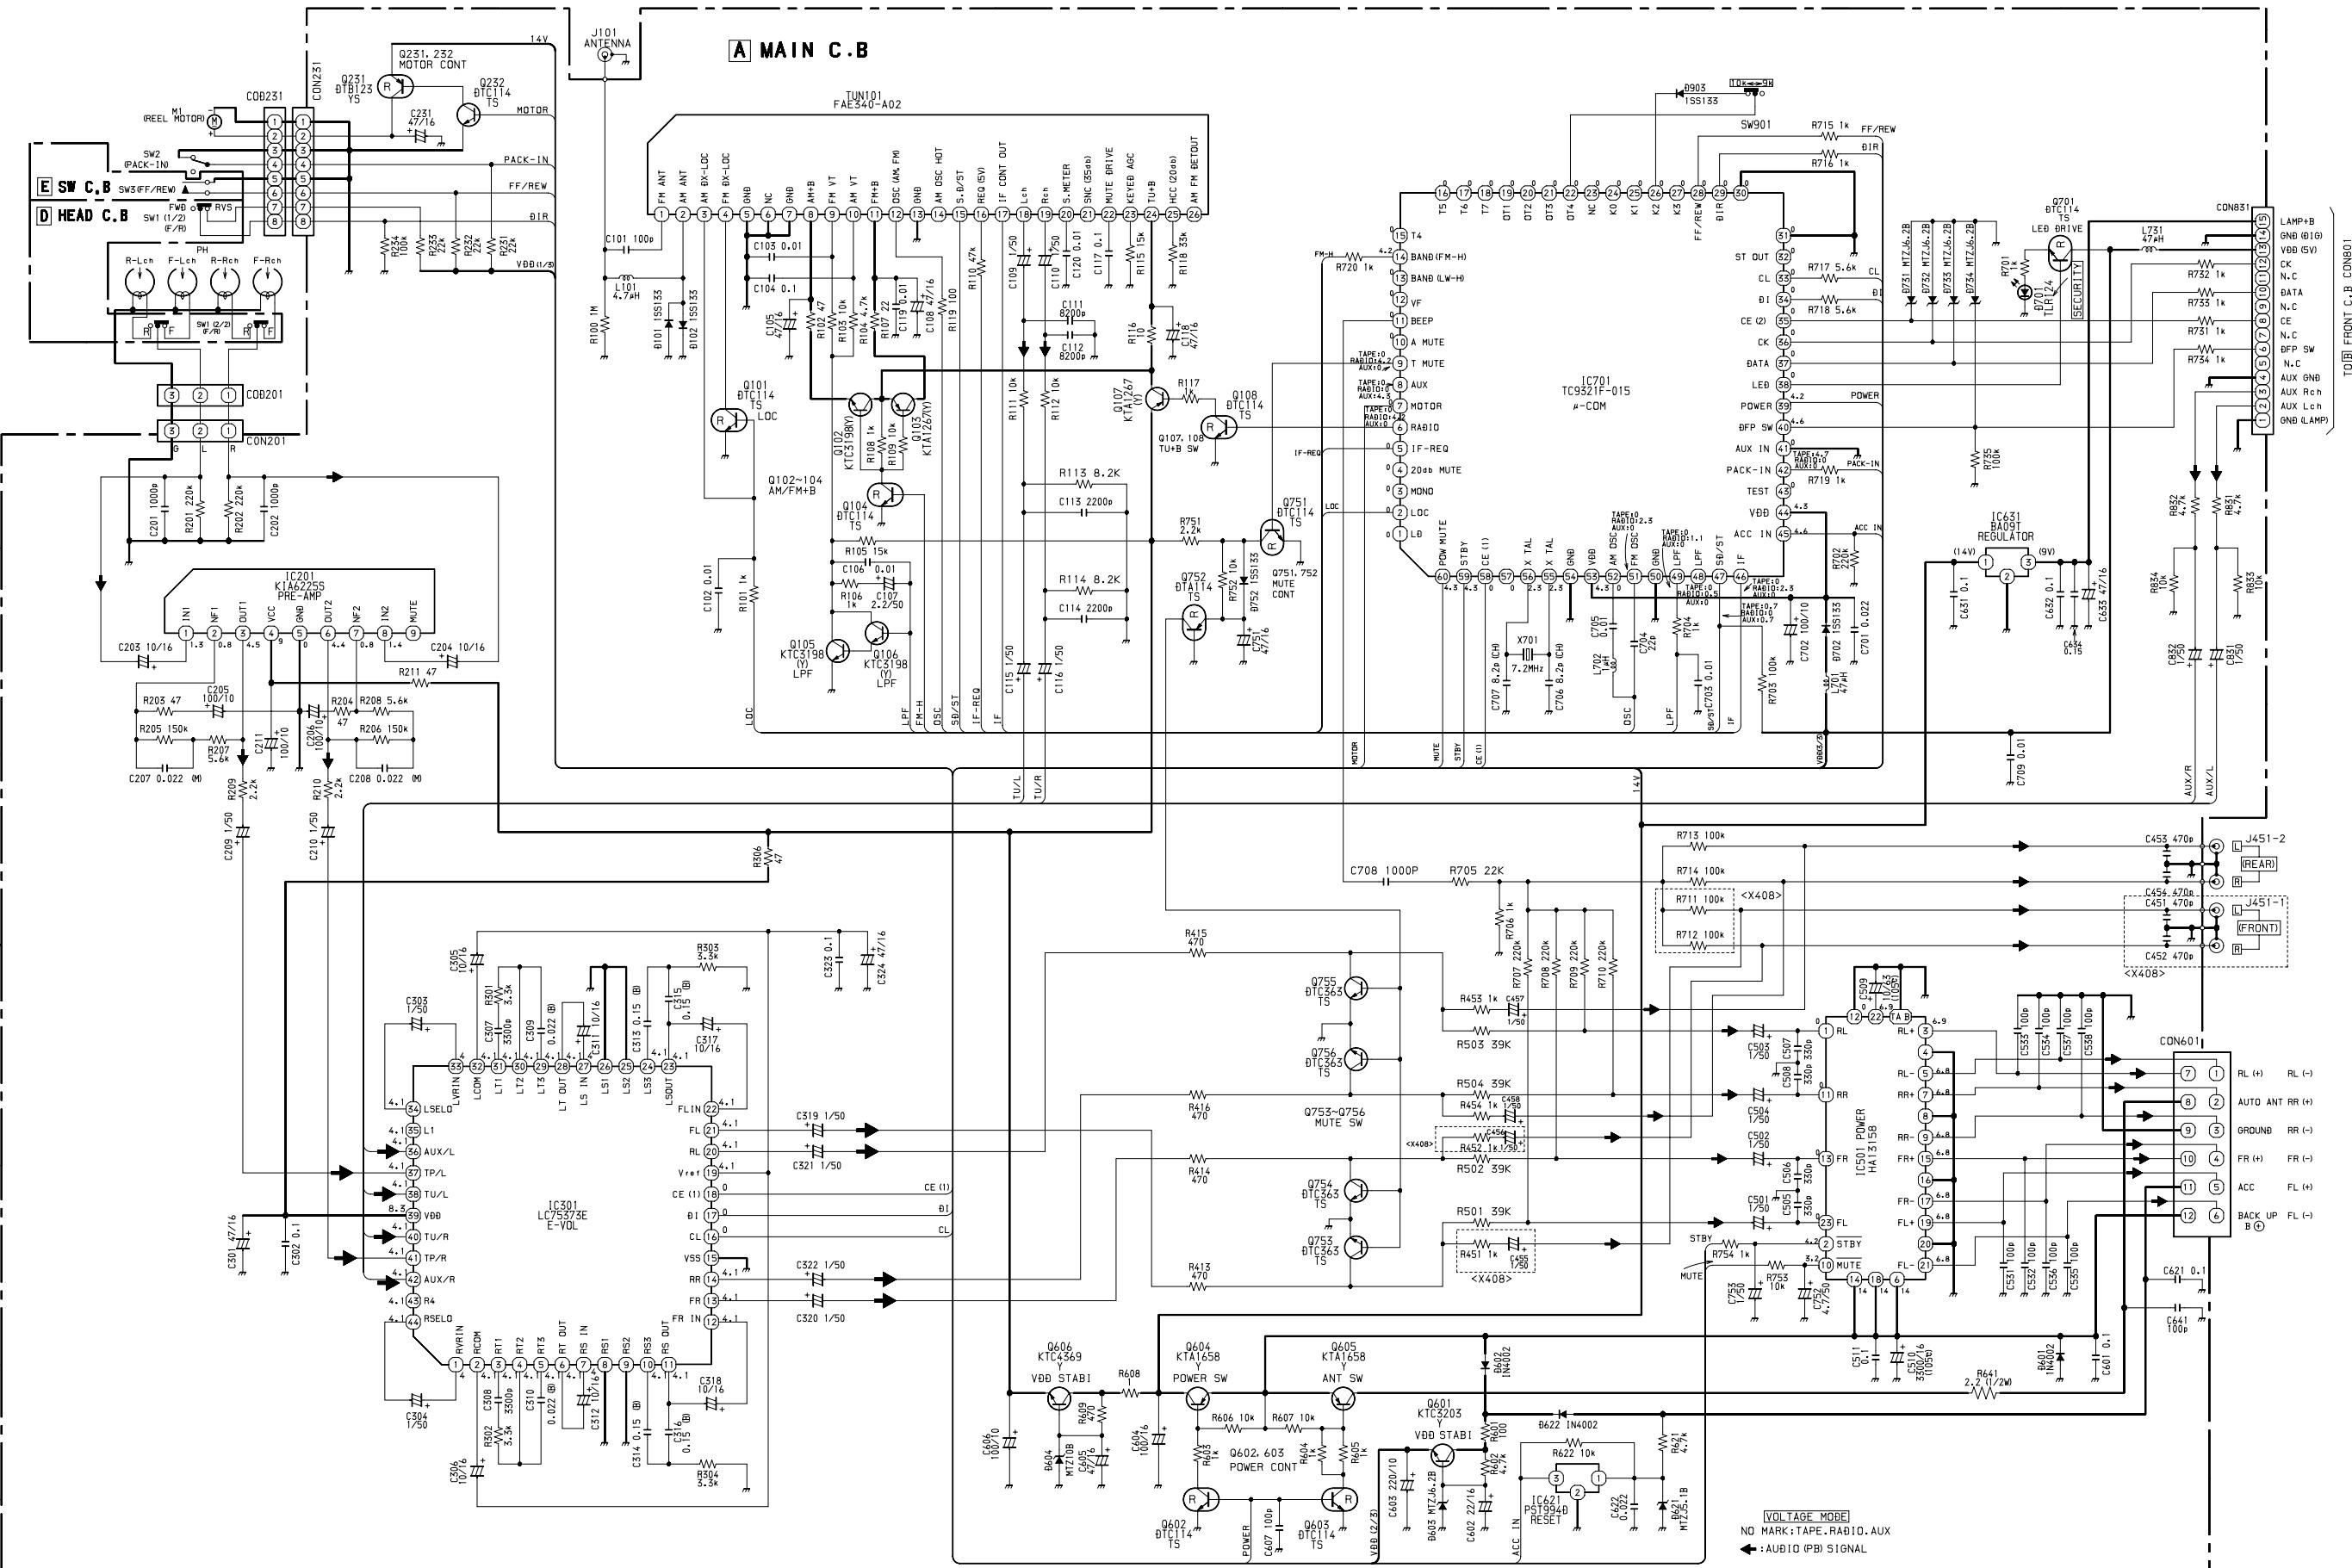

SCHEMATIC DIAGRAM-2(X218,258)

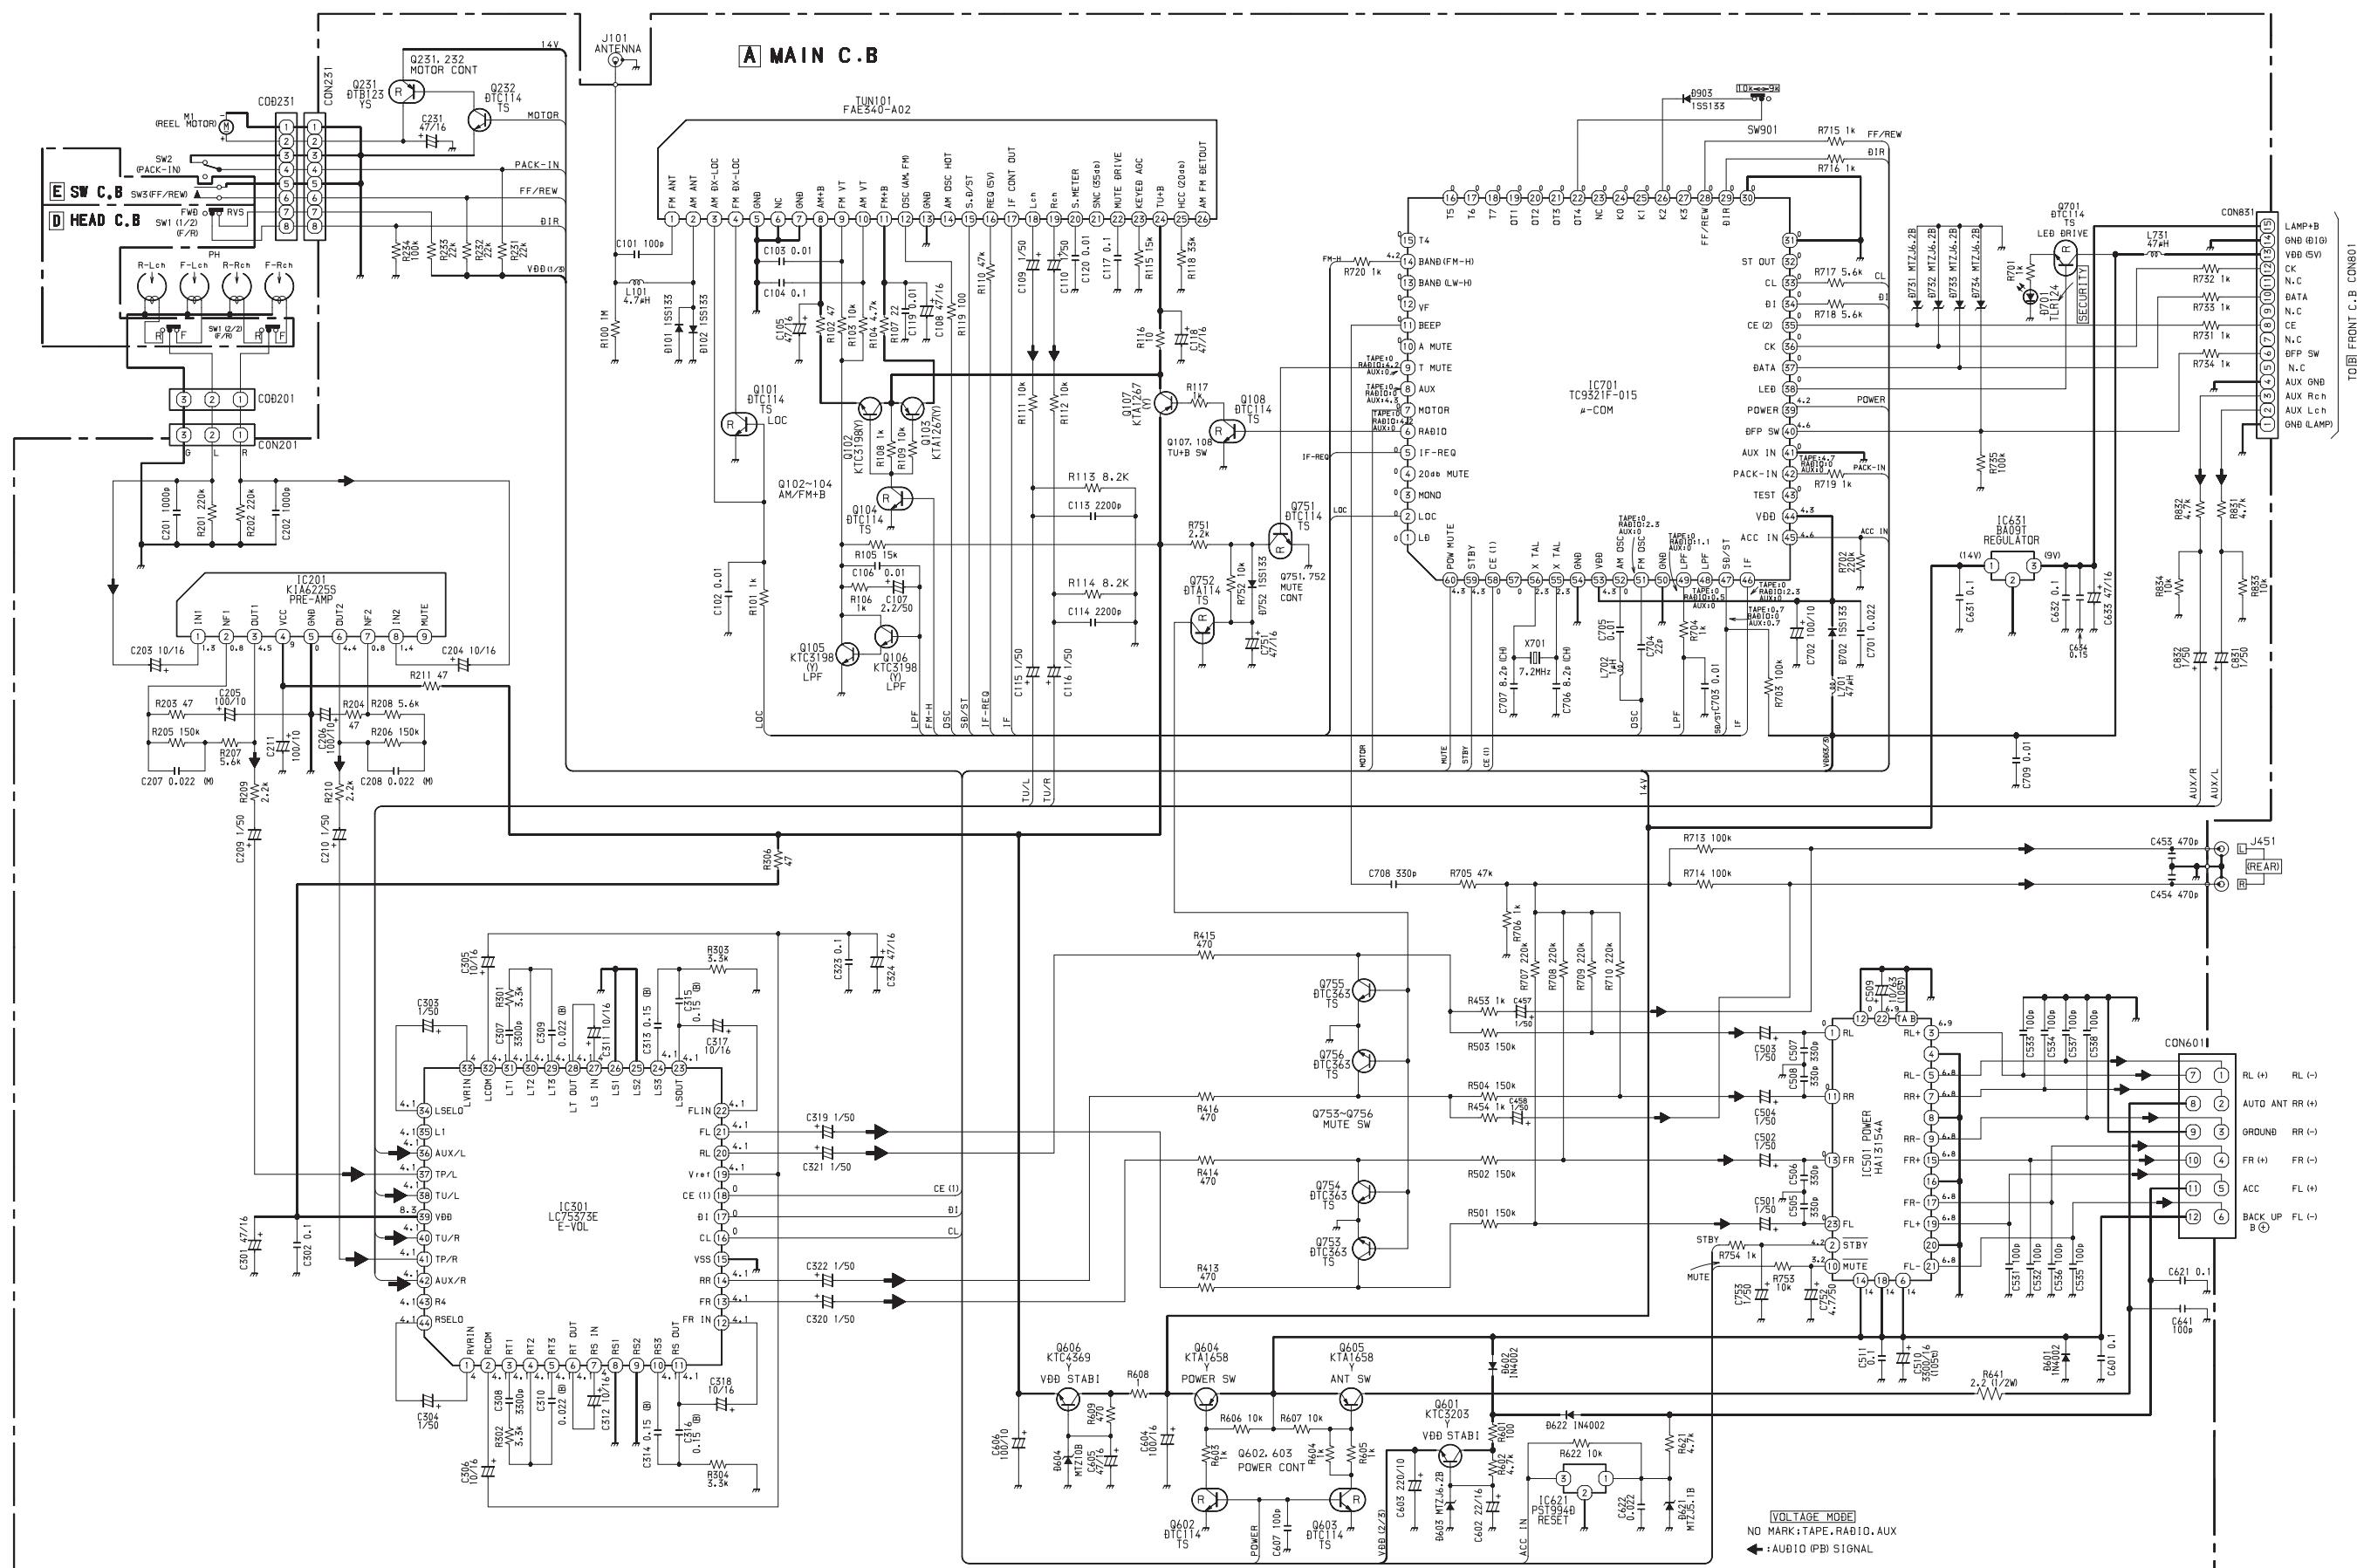

VOLTAGE MODE
NO MARK: TAPE, RADIO, AUX
←: AUDIO (PBI) SIGNAL

TO [] FRONT C.B CON601

LAMP+B
VBB (5V)
CK
N.C
BATA
N.C
CE
N.C
DFF SW
N.C
AUX GND
AUX Rch
AUX Lch
GND (LAMP)

SCHEMATIC DIAGRAM-3

